
Tolomatic™
EXCELLENCE IN MOTION

Parts Sheet

3410-4004_20
Replaced #3410-4003

BC3 Series™ Band Cylinder® Wedge Style

BC310 1"/25 mm BORE

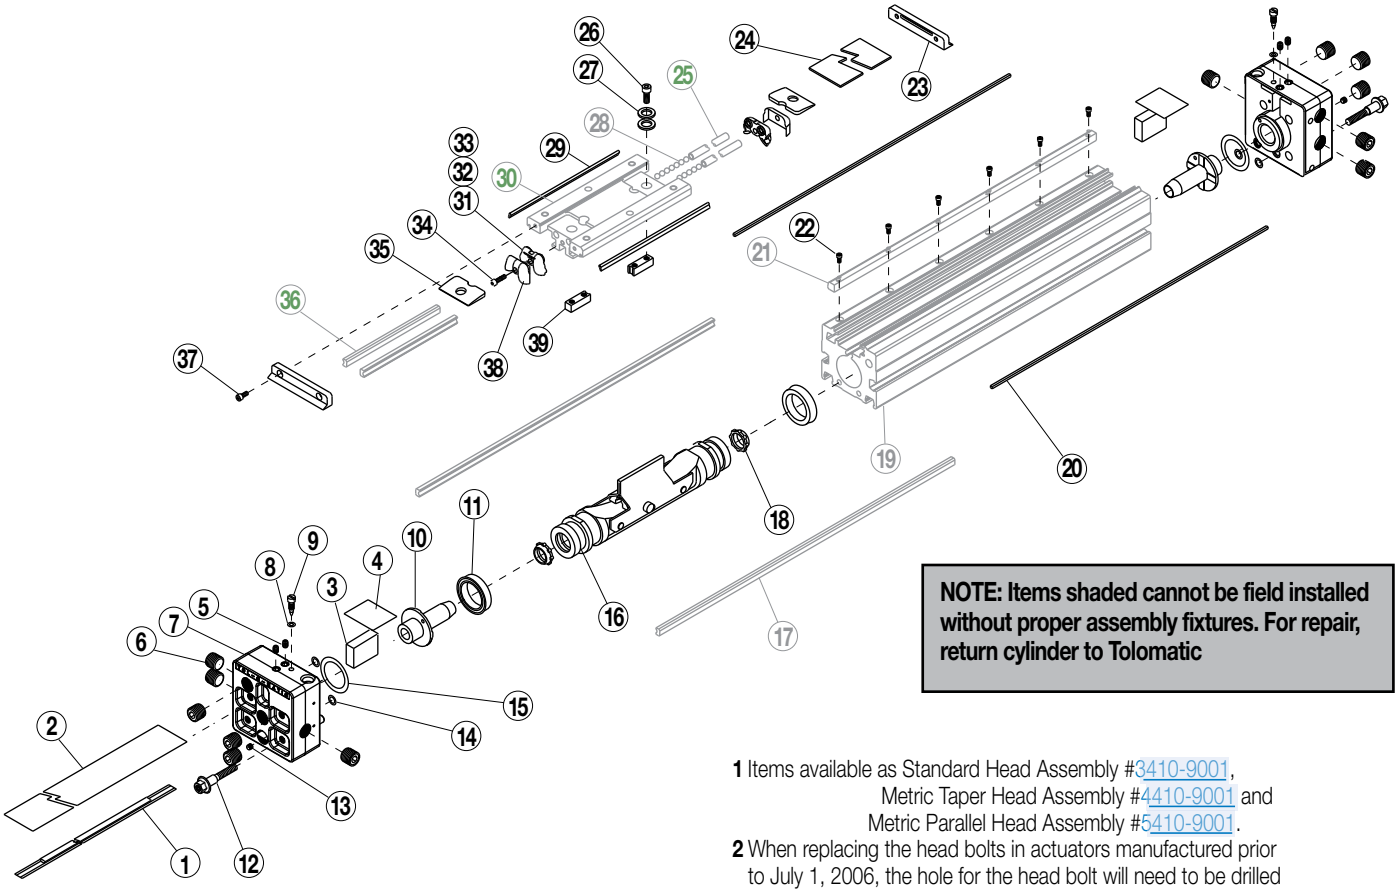

NOTE: Items shaded cannot be field installed without proper assembly fixtures. For repair, return cylinder to Tolomatic

ITEM	US Conv. (SK) PART NO. or CONFIG. CODE	Metric (SM) PART NO. or CONFIG. CODE	DESCRIPTION	QTY.
1[3,5,7]	NSBBC310 SK_ _	NSBBC310 SM_ _	Replacement Sealing Band (3410–1027)	1
2[3,6,7]	NDBBC310 SK_ _	NDBBC310 SM_ _	Replacement Dust Band (3410–1028)	1
3	3410-1257		Clamp	2
4	3410-1258		Clamp Pad	2
5	3410-1343	4410-1017	Set Screw	4
6[1]	1014-1065	4910-1002	Pipe Plug	10
7[1]	3410-1256	–	Standard Head	2
	–	4410-1256	Metric Taper Head	2
	–	5410-1256	Metric Parallel Head	2
8[1,3,4]	0910-1178		Buna-N O-ring	2
9[1]	0910-1177		Cushion Needle	2
10	0910-1185		Cushion Spear	2
11[3,4]	0910-1206		U-Cup	2
12[2]	0910-1344		Head Bolt	8
13[1]	3410-1005	4415-1009	Pipe Plug	2
14[3,4]	0910-1178		Buna-N O-ring	4

1 Items available as Standard Head Assembly #3410-9001, Metric Taper Head Assembly #4410-9001 and Metric Parallel Head Assembly #5410-9001.

2 When replacing the head bolts in actuators manufactured prior to July 1, 2006, the hole for the head bolt will need to be drilled 0.4" (10mm) deeper to accommodate the longer screw length.

COMMON REPLACEMENT PARTS:

3 Repair Kit: Parts contained in Repair Kit RKBC310SK_ _ _ or RKBC310SM_ _ _

4 Seal Kit: Parts contained in Seal Kit #3410-9019

Ordering method:

Seal Band

5 Replacement Seal Band N S B B C 3 1 0 [S K / S M] *or* _ _ _ _ _ D W _

EXAMPLE: N S B B C 3 1 0 S K 2 1 · 2 5 D W 7


6 Replacement Dust Band N D B B C 3 1 0 [S K / S M] *or* _ _ _ _ _ D W _

EXAMPLE: N D B B C 3 1 0 S K 2 1 · 2 5 D W 7

Dust band — Model & Size — Stroke Length — Aux. Carrier

7 After configuration code add: **SK**_ _ _ (for U.S. Conventional)
SM_ _ _ (for Metric)
(Note: The letters SK indicate stroke in inches. Follow these letters with the stroke length in decimal inches.) ***or***
(The letters SM indicate stroke in mm. Follow these letters with the stroke length in decimal millimeters.)

Auxiliary Carrier Option Note: *If replacing a Seal Band (1.), Dust Band (2.), or Magnet Band (20.) on an actuator that has an Auxiliary Carrier, be sure to add "DW_ _ _" to the end of the configuration string when ordering. "DW" indicates the need for additional length and "_ _ _" indicates the measurement of space between carriers (in inches [SK] or millimeters [SM] as indicated earlier in the configuration string).*

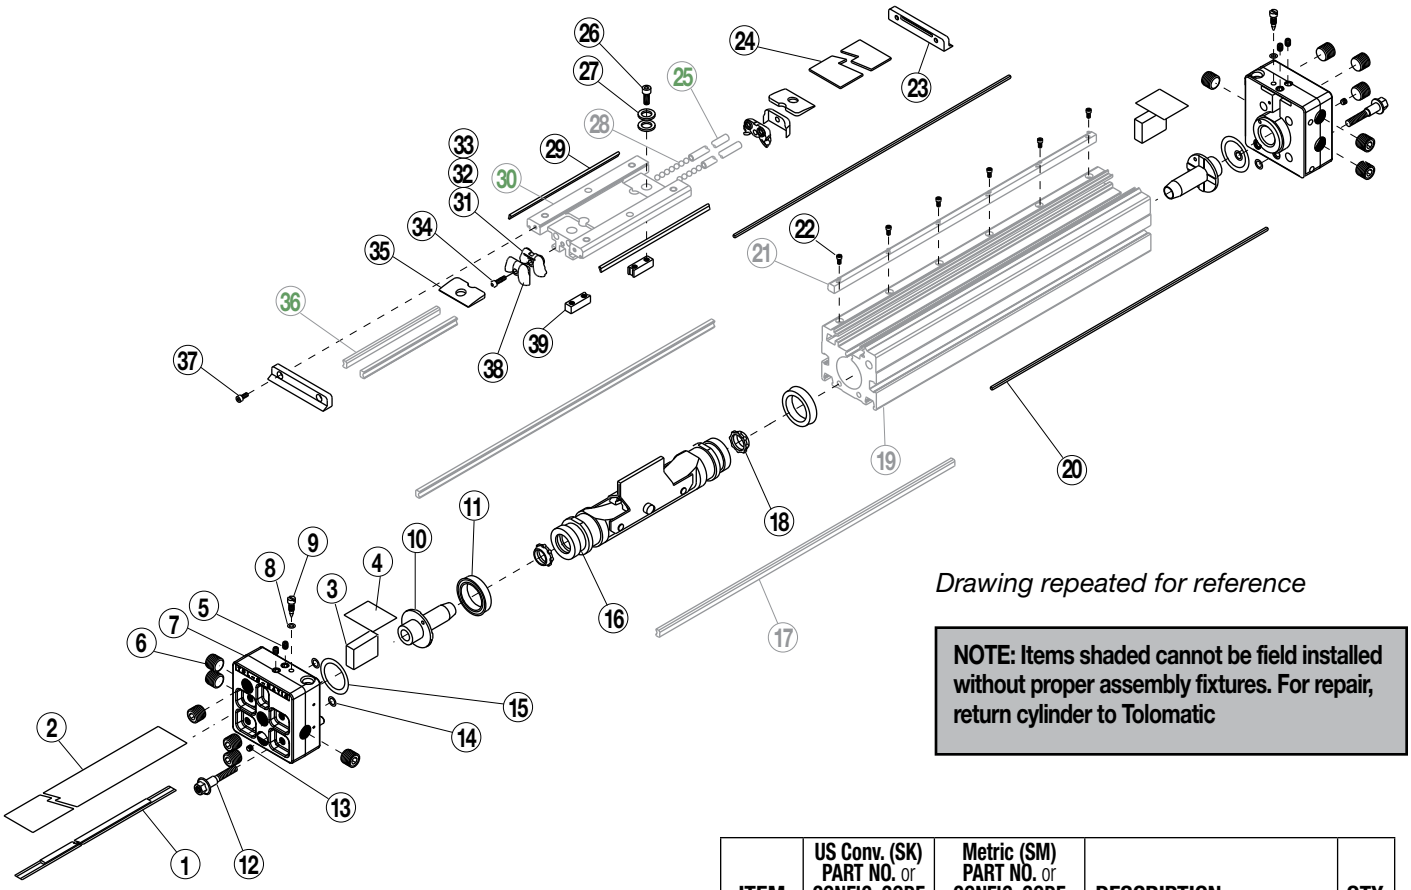

Drawing repeated for reference

NOTE: Items shaded cannot be field installed without proper assembly fixtures. For repair, return cylinder to Tolomatic

ITEM	US Conv. (SK) PART NO. or CONFIG. CODE	Metric (SM) PART NO. or CONFIG. CODE	DESCRIPTION	QTY.
15[3,4]	0910-1160		Buna-N O-ring	2
16	3410-9000		Piston/Bracket Assembly w/ magnet	
17	3410–1023		Rail Way	A/R
18[3,4]	0910-1184		Cushion Seal	2
19	3410–1492		Machined Tube	A/R
20[7,8]	NMBBC310 SK_ _	NMBBC310 SM_ _	Replacement Magnet Band (3410–1022)	2
21	3410–1496		Machined Wedge	A/R
22	0605-1079		Socket Head Cap Screw	A/R
23[3,4]	3410-2024		End Cap	2
24	3410-2022		Carrier Cover	1
25	3410–1019		Ball Return Tube	2
26	0910-1166	4415-1023	Socket Head Cap Screw	4
27	3410-1056		Washer	8
28	3410-1009		Ball	112
29[3,4]	3410-1510		Wiper	2
30	3410–2021	4410–1235	Machined Carrier	1
31	3410-1014		Ball Return	2
32	3410-1015		Right Ball Race	2
33	3410-1032		Left Ball Race	2
34	0910-1357	4905-1012	Socket Head Cap Screw	4

ITEM	US Conv. (SK) PART NO. or CONFIG. CODE	Metric (SM) PART NO. or CONFIG. CODE	DESCRIPTION	QTY.
35	3410-1047		Upper Band Ramp	2
36	3410–1024		Carrier Way	2
37	0605-1079	4905-1005	Socket Head Cap Screw	4
38	3410-1079		PLT, Ball Return	2
39	3410-1010		Piston Block	2

COMMON REPLACEMENT PARTS:

3 Repair Kit: Parts contained in Repair Kit RKBC310SK_ _ _ or RKBC310SM_ _ _

4 Seal Kit: Parts contained in Seal Kit #3410-9019

7 After configuration code add: **SK**_ _ _ (for U.S. Conventional)
SM_ _ _ (for Metric)
(Note: The letters SK indicate stroke in inches. Follow these letters with the stroke length in decimal inches.) ***or***
(The letters SM indicate stroke in mm. Follow these letters with the stroke length in decimal millimeters.)

Ordering method:

8 Replacement Magnet Band
For long stroke lengths the magnet band is shipped in multiple pieces

NMBBC3105 SK or SM _ _ _ _ _ DW_

EXAMPLE: NMBBC3105 SK21.25 DW7

Magnet Band — Model & Size — Stroke Length — Aux. Carrier

Auxiliary Carrier Option Note: *If replacing a Seal Band (1.), Dust Band (2.), or Magnet Band (20.) on an actuator that has an Auxiliary Carrier, be sure to add "DW _ _ _" to the end of the configuration string when ordering. "DW" indicates the need for additional length and "_ _ _" indicates the measurement of space between carriers (in inches [SK] or millimeters [SM] as indicated earlier in the configuration string).*

CYLINDER DISASSEMBLY INSTRUCTIONS FOR INSTALLATION OF REPAIR KITS ONLY

1. Remove Band Cylinder from machinery.
2. Remove any foot mounting hardware external shock absorbers or switches if present. Remove the four Head Bolts (12) and the two Set Screws (6) from each cylinder Head (7). Remove the Clamp Pad (4), and Clamp (3). Remove Heads.
3. Remove Screws (37) from End Caps (23) and slide End Caps off Carrier (30). Slide off Carrier Cover (24). Remove top Dust Band (2). Remove Screws (26) to release Piston Blocks (34). Slide Carrier (30) slightly either direction to remove Piston Blocks (34) and release Piston Bracket Assembly (16). Slide Piston Bracket Assembly out end of tube.

   CAUTION: DO NOT remove the Carrier or the rails. Ball Bearings will fall out as a result.
4. Dislodge the inner Sealing Band (1) from its groove by gently pressing down on the band with an O-ring Pick or similar tool. (When doing so, take care that NO SCRATCHES are made in the tube bore slot.) Remove Sealing Band.

CYLINDER ASSEMBLY INSTRUCTIONS

1. CLEAN AND LUBRICATE

Thoroughly clean all components, particularly the tube bore slot and bands. Thoroughly lubricate the tube with Magnalube®-G grease.

2. READY INNER SEALING BAND

Lubricate rubber strip on both sides of new Sealing Band (1) with Magnalube®-G grease. Slide Sealing Band (1) into cylinder Tube (19) with rubber portion facing up. Center band in Tube so equal lengths of Band extend out both ends.

CAUTION: Metal edges of Sealing Band are sharp. Exercise caution to avoid injury to yourself of the Band and Tube when inserting.

3. INSTALL PISTON ASSEMBLY

Lubricate and install new U-Cups (11) (lip seals facing out) onto Piston ends (16). Lubricate and install new Cushion Seals (18) (small end facing out) into Piston ends and rotate to seat them in their grooves.

NOTE: If the cylinder will be used with optional shock absorber packages, do not install the Cushion Seals. Doing so will adversely affect shock performance.

Place a small amount of grease into the Cushion Seals on each end of the Piston. Fill indentations on both sides of the Piston Bracket Assembly (16) completely with grease and install into the cylinder Tube (19) feeding the Sealing Band (1) between the Piston and Bracket. If the cylinder is equipped for switches, it is important to note which side of the Piston Bracket Assembly (16) contains the Magnet, as switches must be attached to that side of the Tube. Slide the Piston Bracket Assembly (16) to the Carrier (30), slide the Carrier back over the Piston and continue to move the Piston Bracket Assembly the length of the tube to seat the sealing band in its groove. Wipe away excess grease.

NOTE: If Tube and Piston were greased properly, excess grease should be present as Piston exits end of tube.

4. TRIM SEALING BAND

With a razor blade, remove rubber from extended band until flush with the end of tube. With tin snips, trim band to length indicated.

Cylinder Size	***Trim Length From Tube***
1" (25 mm)	.62" (15.7mm)

CAUTION: Bands inaccurately cut too long may cause serious injury to your hand when pressing the head onto the tube.

5. INSTALL HEADS

Lubricate and install new O-Rings (15) onto Head snouts. Lubricate and install new O-rings (15) into cross ports on Heads (7). Remove Cushion Needle Valve (9) and lubricate and install new O-Rings (15) onto Cushion Needle Valves. Insert Cushion Needle Valves (9) back into Heads (7). Insert heads into tube using a slight rocking motion. DO NOT TWIST. Twisting the head during installation may cut the O-ring resulting in excessive leakage during operation.

NOTE: When inserting heads, make sure band does not get pushed backwards into tube. Rubber on band must remain flush to the tube after head installation.

Install Head Bolts (12) into heads (7). *(†When replacing the head bolts in actuators manufactured prior to July 1, 2006, the hole for the head bolt will need to be drilled 0.4" [10mm] deeper to accomodate the longer screw length.)* Torque Head Bolts (12) to 70 to 80 in.-lbs. (7.91 to 9.04 Nm).

6. LUBRICATE BALLWAYS

Before installing the top Dust Band (2) lubricate the ballways with Mobil HP Grease.

7. INSTALL CARRIER STOPS

Place a Piston Stop (34) on either side of the Piston Bracket Assembly (16), notch on Stop to face bracket. Slide the Carrier (30) over the Piston Bracket and Carrier Stops (34) until holes in the Carrier line up with holes in Piston Stops. Apply Loctite #242 on the Screws (26) and secure stops to the carrier. There should be no slack between stops and bracket.

8. INSTALL DUST BAND

Install the top Dust Band (2) over the Carrier (30) centering it along the length of the cylinder. Slide Carrier Cover (24) into slots on top of Carrier. Apply Loctite #242 to Screws (37) and secure End Caps (23) to ends of Carrier (30). With tin snips, cut ends of top band 1/20" in from outside edge of Head (7). Place a Clamp (3) between the Sealing Band (1) and Dust Band (2). Place Clamp Pad (4) in each Head (7). Apply Loctite #242 to Set Screws (5) and tighten to secure bands.

9. CHECK ASSEMBLY

Run the Carrier (30) back and forth along the full stroke to make certain the cylinder is properly assembled before applying air. Before mounting cylinder back in application, check the cylinder's internal cushions. (If optional shock absorber kits are being used, this step can be eliminated as Cushion Seals (18) were not installed.) Push the Carrier (30) to one end. You should feel the Cushion decelerate the Carrier before the Cushion bottoms out. If the Carrier slams into the end of the cylinder, either the Cushion Seals have not been properly installed or the Cushion Needle Valve (9) is adjusted too far out.

10. REMOUNT

Before installing back in application, check your air lines to be sure they are in good condition and free of leaks. Remount and apply air. If external shock absorbers are not being used, readjustment of the Cushions may be necessary. Start by screwing the Cushion Needle Valve (9) all the way in but do not tighten, then back it out slightly. Cycle the cylinder and back the Cushion Needle Valve out as necessary to reduce the amount of cushion. This will prevent the load from slamming into an under adjusted cushion and prevent band damage caused from pressure spikes as a result of over tightening the Cushion Needle Valve.

SINGLE-END PORTING


The BC3 Band Cylinder is uniquely designed for multiple port locations including single-end porting. The lower ports on the head assembly only function when used to cross port the cylinder for single-end porting.

To convert the BC3 cylinder to a single-end port:

1. Remove access Pipe Plug fitting from the **opposite** head assembly that air lines will be installed into. Then remove the internal port Pipe Plug (13).
2. Reinstall access Pipe Plug into the bottom of Head (7).
3. Remove pipe plug (6) from head that air lines will be installed.

NOTE: Use thread sealant when installing pipe plugs.


Band Cylinder® is a registered trademark and BC3 Series is a trademark of Tolomatic
Loctite® is a registered trademark of the Loctite Corporation, www.loctite.com
Magnalube®-G is a registered trademark of the Carleton-Stuart Corporation, www.magnalube-g.com

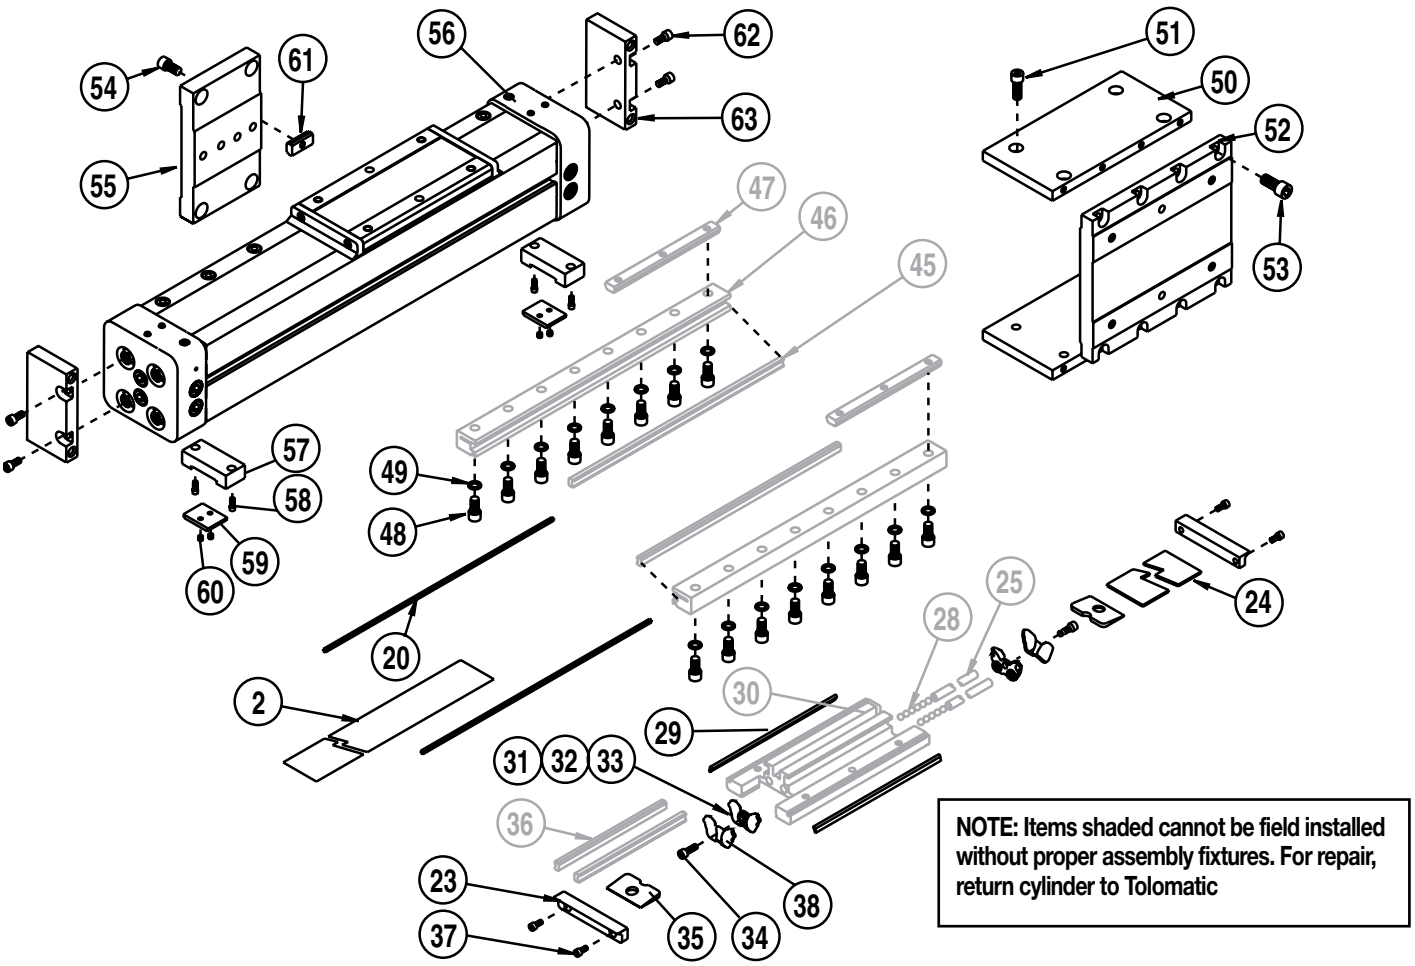

ITEM	US Conv. (SK) PART NO. or CONFIG. CODE	Metric (SM) PART NO. or CONFIG. CODE	DESCRIPTION	QTY.
2[5]	NDBBC310 D SK_ _	NDBBC310 D SM_ _	Replacement Dust Band (3410–1239)	1
20	NMBBC310 D SK_ _	NMBBC310 D SM_ _	Replacement Magnet Band (3410–1029, 3410–1022)	2
23	3410-2024		End Cap	2
24	3410-2022		Carrier Cover	1
25	3410–1019		Ball Return Tube	2
28	3410–1009		Ball	112
29	3410-1510		Wiper	2
30	3410–2021	4410–1235	Machined Carrier	1
31	3410-1014		Ball Return	2
32	3410-1015		Right Ball Race	2
33	3410-1032		Left Ball Race	2
34	0910-1357	4905-1012	Socket Head Cap Screw	2
35	3410-1047		Upper Band Ramp	2
36	3410–1023		Carrier Way	2
37	0605-1079	4905-1005	Socket Head Cap Screw	4
38	3410-1079		PLT, Ball Return	2
45	3410–1241		Rail Way	2
46	3410–1020		Machined Rail	2
47	3410–1008		Rail Nut	AR

ITEM	US Conv. (SK) PART NO. or CONFIG. CODE	Metric (SM) PART NO. or CONFIG. CODE	DESCRIPTION	QTY.
48	3410-1229		Button Head Cap Screw	AR
49	3410-1048		Washer	AR
50	3410-1049	4410-1049	Plate, Conn., Dual Carrier	2
51	2317-1014	4415-1000	Socket Head Cap Screw	8
52	3410-1054	4410-1054	Plate, Dual Carrier	1
53	2317-1014	4415-1000	Socket Head Cap Screw	8
KIT[5]	**3410-9026**	**4410-9026**	**Dual 180° Carrier Tube Support Kit**	**AR**
54	0915-1016	4415-1022	Socket Head Cap Screw	4
55	3410-1053		Tube Support	1
56	3410-1051	4410-1051	Head, Dual 180°	2
	—	5410-1051	Head, Dual 180° Parallel	2
57	3410-1050		PLT, Band Dual Carrier	2
58	1085-1075	0610-1033	Socket Head Cap Screw	4
59	3410-1029	4410-1029	Clamp	2
60	3410-1343	4410-1017	Set Screw	4
61	3410-1013	4410-1013	Silver Nut for Slots 90° from Carrier	4
62	0810-1201	4415-1022	SHCS (each end)	2
63	3410-1052		Foot Mount, Dual 180° Carrier	1

5 After configuration code add **SK**_ _ _ (if US Conventional) or **SM**_ _ _ (if Metric). The letters **SK** indicate stroke in inches. The letters **SM** indicate stroke in mm. Follow these letters with the stroke length in decimal places. If the actuator has the dual carrier option add the code "**DW**_ _ _" to the end of the configuration string when ordering. "**DW**" indicates the need for additional length and "_ _ _" indicates the measurement of space between carriers (in inches [**SK**] or millimeters [**SM**] as indicated earlier in the configuration string).

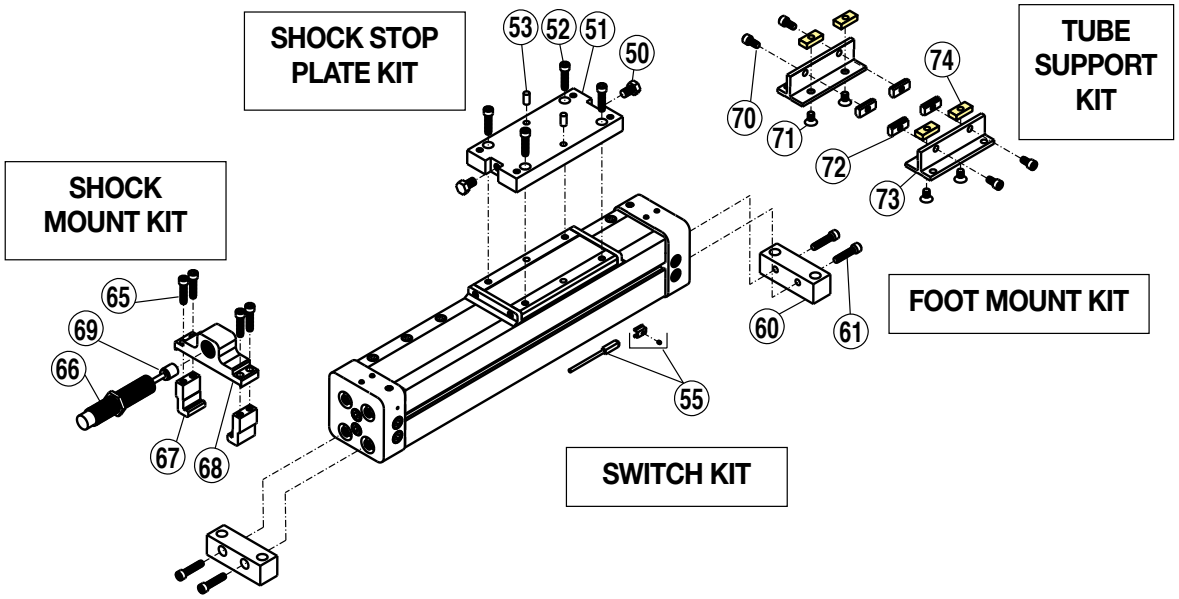

ITEM	US Conv. (SK) PART NO.	Metric (SM) PART NO.	DESCRIPTION	QTY.
SHOCK STOP PLATE KIT[1]				
KIT[1]	3410-9004	4410-9004	Shock Stop Plate Kit	
50	0610-1045	4415-1021	Impact Bolt	2
51	3410-1039	4410-1039	Shock Plate	1
52	1004-1064	4420-1002	Socket Head Cap Screw	4
53	0610-1044	4415-1004	Dowel Pin	2
SWITCH KIT				

CONFIG. CODE ORDERING	
Mounting Hardware & FE conn. included	
CODE	**DESCRIPTION**
BT	Switch Kit, Reed, Form C, 5m
BM	Switch Kit, Reed, Form C, Male Conn.
RT	Switch Kit, Reed, Form A, 5m
RM	Switch Kit, Reed, Form A, Male Conn.
CT	Switch Kit, Triac, 5m
CM	Switch Kit, Triac, Male Conn.
KT	Switch Kit, Hall-effect, Sinking, 5m
KM	Switch Kit, Hall-effect, Sinking, Male Conn.
TT	Switch Kit, Hall-effect, Sourcing, 5m
TM	Switch Kit, Hall-effect, Sourcing, Male Conn.
NOTE: When ordered female connector & all mounting hardware is included	

55

ITEM	US Conv. (SK) PART NO.	Metric (SM) PART NO.	DESCRIPTION	QTY.
FOOT MOUNT KIT[2]				
KIT[2]	3410-9005	4410-9005	Foot Mount Kit (one end)	
KIT[2]	3410-9025	4410-9025	Dual 180° Carrier Foot Mount Kit (one end)	
60	3410-1035		Foot Mount	2
61	1024-7711	4415-1020	Socket Head Cap Screw	4
SHOCK MOUNT KIT WITHOUT SHOCK[3]				
KIT[3]	3410-9003	4410-9003	Shock Mount Kit - one side (hardware only, no shock)	
65	0910-1314	4415-1020	Socket Head Cap Screw	4
67	3410-1038	4410-1038	Clamping Hook	2
68	3410-1037	4410-1037	Shock Mount	1
SHOCK MOUNT KIT WITH SHOCK[4]				
KIT[4]	3410-9010	4410-9010	Shock Absorber Kit - one side (Light Duty Shock)	
KIT[4]	3410-9013	4410-9013	Shock Absorber Kit - one side (Heavy Duty Shock)	
65	0910-1314	4410-1015	Socket Head Cap Screw	4
66	2406-1063	4910-1337	Shock, Light Duty	1
	2406-1062	4910-1338	Shock, Heavy Duty	1
67	3410-1038	4410-1038	Clamping Hook	2
68	3410-1037	4410-1037	Shock Mount	1
69	0510-1018	0510-1018	Shock Stop Spacer	1
TUBE SUPPORT KIT[5]				
KIT[5]	3410-9006	4410-9006	Tube Support Kit	AR
70	3410-1012	4410-1077	Socket Head Cap Screw	4
71	3410-1046	4410-1016	Flat Head Cap Screw	4
72	3410-1013	4410-1013	Silver Nut for Slots 90° from Carrier	4
73	3410-1044	3410-1044	Tube Support	2
74	3410-1775	4410-1708	Yellow Nut for Slots Opposite Carrier	4

Switch Ordering NOTES:

To order field retrofit switch and hardware kits for all Tolomatic actuators: SW (Then the model and bore size, and type of switch required)

Example: SWBC310RT

(Hardware and Form A Reed switch with 5 meter lead for 1.0" bore BC3 band cylinder)

Service Parts Ordering NOTES:


1 Shock Stop Plate Kit contains shock plate, impact bolts, screws and dowel pins.

2 Foot Mount Kit contains one bracket and mounting hardware.

3 Shock Mount Kit Without Shock contains one set of mounting hardware.

4 Shock Mount Kit With Shock contains one shock absorber and mounting hardware.

5 Tube Support Kit contains one tube support and mounting hardware.

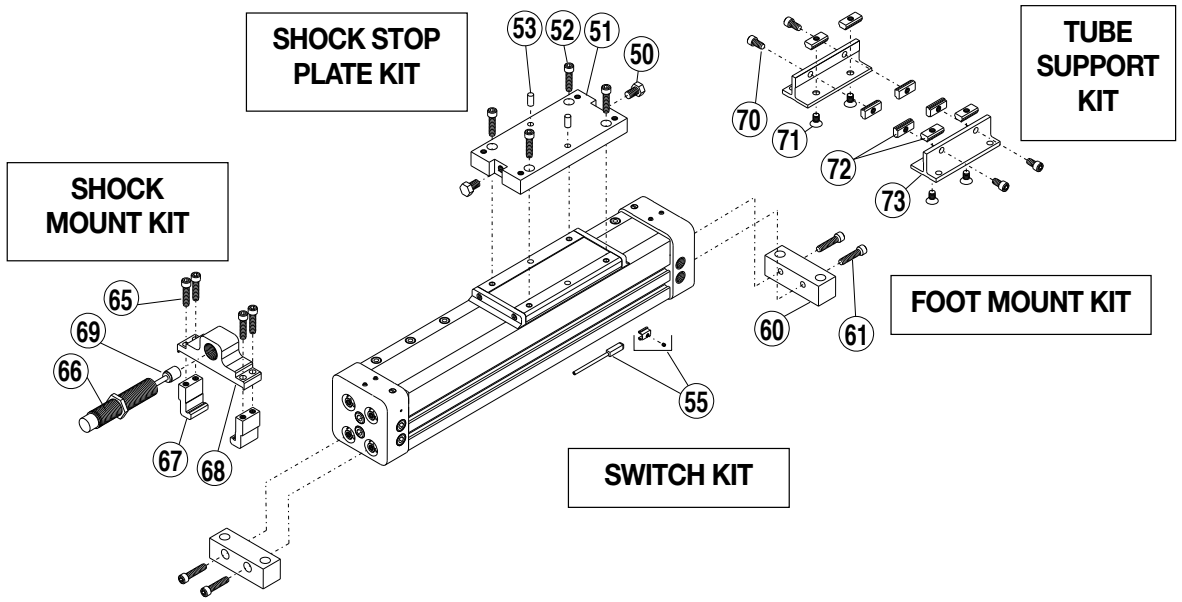


OPTIONAL ACCESSORY ASSEMBLY INSTRUCTIONS

1. **SHOCK ABSORBERS**
   Slide a Clamping Hook (67) into each side of the Tube (19). Apply Loctite #242 to Screws (65) and secure Shock Mount Plate (68) to Clamping Hooks (67). Thread Shock (66) into Shock Mount Plate (68). Tighten Shock (66) to Shock Mount Plate (68) with Jam Nut. Apply Loctite #242 to Screws (52) and secure Shock Plate (51) to Carrier (30). Insert two Dowel Pins (53) into Shock Plate (51). Apply Loctite #242 to Impact Bolts (50) and thread into holes in ends of Shock Plate (51). Torque Impact Bolts (50) to 100-110 in.-lbs.

2. **FOOT MOUNTS**
   Apply Loctite #242 to Screws (61) and secure Foot Mount (60) to each Head (7).

3. **TUBE SUPPORTS**
   Four T-Nuts (72) are required on each side of the Tube (19), two T-Nuts on bottom of Tube and two in lower slots on tube sides. Tube Supports should be secured at the required distances determined for the application to prevent Tube deflection. Apply Loctite #242 to Screws (71) and secure Tube Supports (73) to tube aligning holes in T-Nuts with holes in Tube Supports.

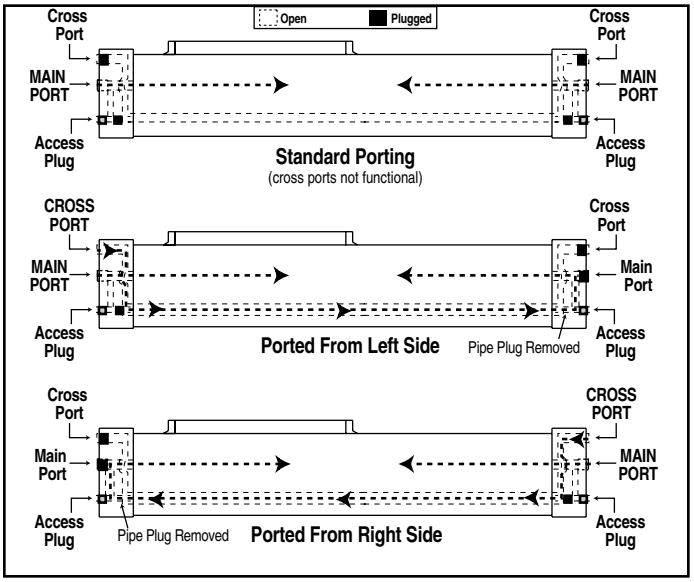

4. **SWITCHES**
   On assembled cylinder, Secure Switch to open port side of cylinder with a Hardware kit (clamp and screw).

   NOTE: Form A Reed Switches should not be used in TTL logic circuits. A voltage drop caused by the L.E.D. indicator will result.For applications where TTL circuits are used, please contact the factory.

   WARNING: An ohmmeter is recommended for testing Reed Switches. NEVER use an incandescent light bulb as a high current rush may damage the switch.


   Reed and TRIAC switches are only recommended for signalling position, not directly powering soleniods. For shifting a solenoid, a relay or resistor is recommended between it and the Reed Switch. Switch ratings must not be exceeded at any time.

   NOTE: For Hall Effect Switch Magnet, be sure the S pole of the magnet (indicated with black dot) is facing toward the switch (down).


   For complete Switch Performance Data, refer to the Tolomatic Pneumatic Catalog #9900–4000.

WIRING DIAGRAMS


RT & RM DC REED, FORM A

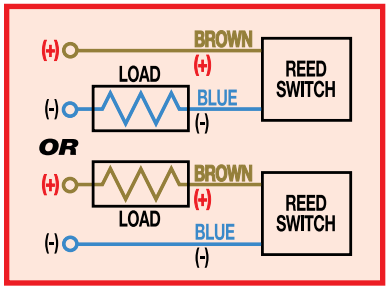


CT & CM AC REED, TRIAC

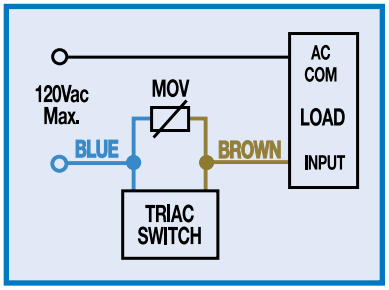


BT & BM DC REED, FORM C

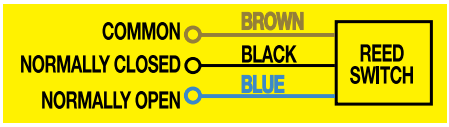

TT & TM HALL-EFFECT, SOURCING, PNP

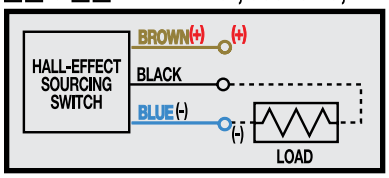

KT & KM HALL-EFFECT, SINKING, NPN

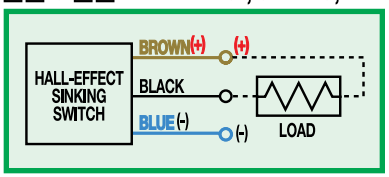

INSTALLATION INFORMATION



THE NOTCHED FACE OF THE SWITCH INDICATES THE SENSING SURFACE AND MUST FACE TOWARD THE MAGNET.



THE NOTCHED GROOVE IN THE ACTUATOR INDICATES THE GROOVE TO INSTALL THE SWITCH. CONTACT TOLOMATIC IF SWITCHES ARE REQUIRED ON ANOTHER SIDE OF ACTUATOR.

Some actuators may require switch mounting on a specific side of the assembly. Call Tolomatic for details.

REPLACEMENT OF QD SWITCHES MANUFACTURED BEFORE JULY 1, 1997: It will be necessary to replace or rewire the female end coupler.



LUBRICATION AND MAINTENANCE

All Tolomatic BC3 Band Cylinders are prelubricated at the factory. To ensure maximum cylinder life, the following guidelines should be followed.

1. **Filtration**
   We recommend the use of dry, filtered air in our products. "Filtered air" means a level of 10 Micron or less. "Dry" means air should be free of appreciable amounts of moisture. Regular maintenance of installed filters will generally keep excess moisture in check.

2 **External Lubricators (optional)**
   The factory prelubrication of Tolomatic Band Cylinders will provide optimal performance without the use of external lubrication. However, external lubricators can further extend service life of pneumatic actuators ***if*** the supply is kept constant.
   Oil lubricators, (mist or drop) should supply a minimum of 1 drop per 20 standard cubic feet per minute to the cylinder. As a rule of thumb, double that rate if water in the system is suspected. Demanding conditions may require more lubricant.
   If lubricators are used, we recommend a non-detergent, 20cP @ 140˚F 10-weight lubricant. Optimum conditions for standard cylinder operation is +32˚ to +150˚F (+0˚ to 65.5˚C).
   NOTE: Use of external lubricators may wash away the factory installed lubrication. External lubricants must be maintained in a constant supply or the results will be a dry actuator prone to premature wear.

3. **Sanitary environments**
   Oil mist lubricators must dispense "Food Grade" lubricants to the air supply. Use fluids with ORAL LD50 toxicity ratings of 35 or higher such as Multitherm® PG-1 or equivalent. Demanding conditions can require a review of the application.

4. **Bearing lubrication**
   The bearing system is prelubricated at the factory with a high quality No. 2 lithium-soap base grease. Relubrication is recommended every .5-1 million cycles using a lithium-soap base grease for optimal bearing performance. To relubricate, remove Set Screws (5), and Clamp Pad (4). Lift back dust band (2) and apply grease directly to the stationary ball ways.

5. **Cushion Adjustment**
   Adjust the cushion needles in the cylinder heads carefully to obtain a smooth, hesitation free deceleration for your particular application. If there are questions on proper adjustment, please consult Tolomatic

Tolomatic™
EXCELLENCE IN MOTION
COMPANY WITH QUALITY SYSTEM CERTIFIED BY DNV = ISO 9001 =
3800 County Road 116, Hamel, MN 55340 USA
https://www.Tolomatic.com • Email: Help@Tolomatic.com
Phone: (763) 478-8000 • Toll Free: 1-800-328-2174

All brand and product names are trademarks or registered trademarks of their respective owners. Information in this document is believed accurate at time of publication. However, Tolomatic assumes no responsibility for its use or for any errors that may appear in this document. Tolomatic reserves the right to change the design or operation of the equipment described herein and any associated motion products without notice. Information in this document is subject to change without notice.

© 2026 Tolomatic 202610291126

Visit www.tolomatic.com for the most up-to-date technical information